



DI-M9320 Addressable Manual Release Station

Features

- ✧ Electronically addressed. The address can be modified in field.
- ✧ It adopts a pull-down start method and can be reset with a dedicated key.
- ✧ The terminal block is of a plug-in structure, which is convenient for installation.
- ✧ Standards: UL38.

Description

DI-M9320 Addressable Manual Release Station (hereinafter referred to as "Release Station") can be connected to the loop of GST-GP01 Gas Releasing Control Panel (Control Panel). The Release Station is designed for installation in frequently accessed areas. When manual gas release is required, the operator can pull down the handle of the Release Station to send a start signal to the Gas Releasing Control Panel. Upon receiving the signal, the Panel will initiate a delayed gas release sequence, simultaneously display the address information of the Release Station and generate an alarm sound.

Specification

Operating Voltage	Loop 24V (16V~28V)
Standby Current	≤0.5mA
Starting Current	≤0.5mA
Type of the Part	Reusable
Addressing Method	Electronically addressed
Address Range	One address within 1~242.
Wiring	Polarity-insensitive two-wire
Ingress Protection Rating	IP30(Not evaluated by UL)
Environmental Temperature	-40°C~+55°C(Not evaluated by UL)
Relative Humidity	≤95%, non-condensing(Not evaluated by UL)
Material and Color of Enclosure	Plastic (5VA), red
Dimension (L×W×H)	130mm×93mm×47mm
Mounting Hole Distance	60mm (Width)/83mm (Length)
Weight	About 200g



Type F

Connection and Cabling

The terminals and mounting holes of the Release Station are shown in Figure 1.

The mounting holes of this product are compatible with the 4x2 embedded box (US standard) or the 86-box (Not evaluated by UL)

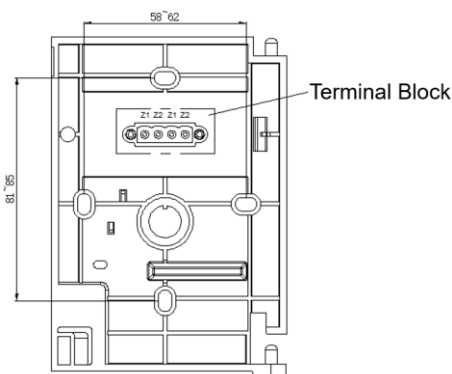


Figure 1 Terminal Block/Mounting Hole Diagram

Wiring Instructions:

Z1/Z2: Connect to the loop of control panel (non-polarized).

Recommended Cabling: 18-12AWG fire-rated cables should be used where possible, subject to local codes.

Installation

Select the appropriate back box or embedded box matching up with the mounting holes. When installing, connect the cable to the corresponding terminals and secure with the terminals' built-in screws. Unlock the side lock of the product with the key, as shown in Figure 2. Open the front cover, fix the base to the back box or embedded box with screws, then fasten the front cover back to the base, and lock the front cover tightly using the key. The installation diagram is shown in Figure 3.

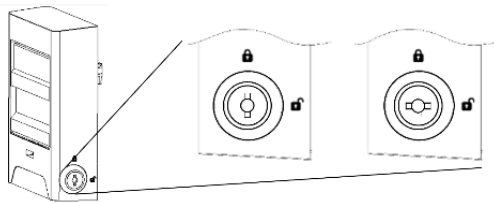


Figure 2 Key/Lock Diagram

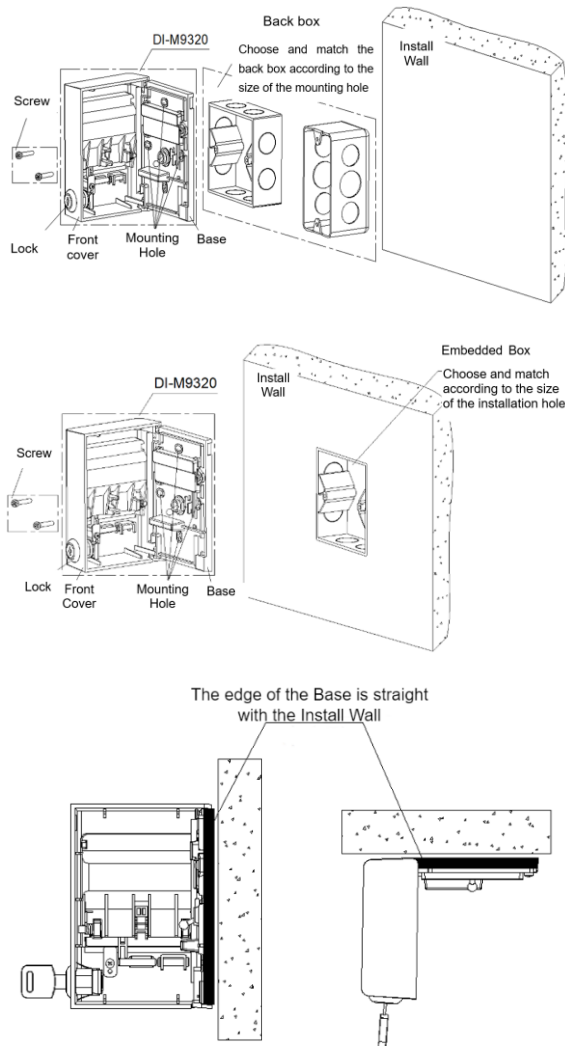


Figure 3 Installation Diagram

Caution: The edge of the base should be straight with the wall. Do not overtighten the mounting screws to prevent deformation of the base, which may cause damage or failure of the product.

Application

The application diagram of the Release Station is shown in Figure 4.

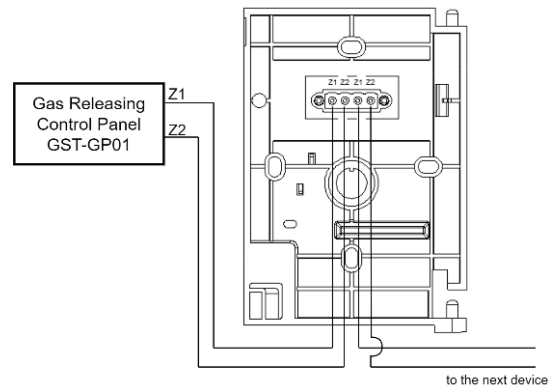


Figure 4 Application Diagram

- ✧ Please use P-9910B Hand Held Programmer to program the address. Please refer to the manual of the P-9910B Hand Held Programmer for detailed method.
- ✧ Then connect Z1 and Z2 on the base to the loop of Control Panel. If the connection is correct, the Control Panel should be able to register with the Release Station.

Operation

a) Manual Release of Gas Fire Suppression

Lift the "Transparent Baffle" and pull the "Handle" down to the utmost. Then a start signal can be sent to the Panel, as shown in Figure 5.

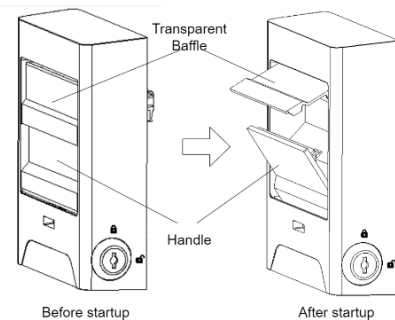


Figure 5 Startup Diagram

b) Resetting the Handle of the Release Station.

Unlock the side lock of the product with the key, then open the front cover, reset the toggle switch.

Remove the damaged warning pin and replace it with a new one. Close the front cover, lock it, remove the key, and the product returns to its normal state, as shown in Figure 6.

Caution: The warning pin is damaged after startup and needs replacement after each reset.

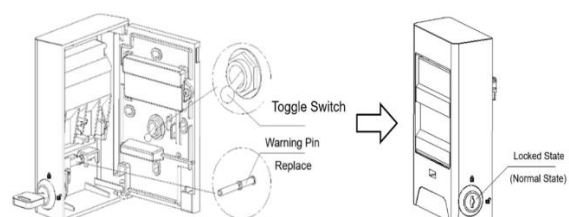


Figure 6 Reset Diagram

Caution: After startup, the reset of the "Handle" should be carried out in accordance with the instructions in the manual. It is prohibited to force a violent reset without opening the front cover. Forced reset can cause damage and failure of the product.

◇ Commissioning Instructions

Open the front cover, manually toggle the switch, and the Control Panel should receive the alarm signal.

Reset the toggle switch, fasten the front cover back onto the base, lock it with the key, and the Release Station will restore monitoring status.

Caution: To prevent accidental discharge of extinguishing gas, set the Control Panel to maintenance mode before testing.

Accessories and Tools

Model	Name	Remarks
P-9910B	Hand Held Programmer	Order separately
——	Warning Pin*2	Refer to accessory
——	Key*2	Refer to accessory
*For accessory procurement, please contact Sales Department.		

For Article33 information, please refer to the following website: <https://www.gst.com.cn/en/reacharticle33.asp>

Limited Warranty

GST will repair or replace the product to the original purchaser free of charge, if defective in materials or workmanship during the warranty period, subject to the terms below. GST and KDSS are not responsible for defects or problems as a result of conditions or applications including normal wear and tear, catastrophe, fault or negligence of any user or any party other than GST and KDSS, improper installation, application, storage, maintenance, or use of products, other causes external to products, or failure to conform to any applicable recommendations of GST and KDSS. In no event shall GST and KDSS be liable for incidental, indirect, special or any other consequential damages.

To the fullest extent permissible by law, the foregoing limited warranty is exclusive and in lieu of all other warranties, whether written, oral, implied or statutory. Subject to applicable law, in no event shall the liability of GST and KDSS exceed the purchase price of the products. NO IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR PARTICULAR PURPOSE SHALL APPLY. Anybody, including the agents, distributors or employees, is not in the position to amend the contents of this warranty.

Product warnings and disclaimers

THESE PRODUCTS ARE INTENDED FOR SALE TO AND INSTALLATION BY QUALIFIED PROFESSIONALS. KIDDE GLOBAL SOLUTIONS AND ITS AFFILIATE COMPANIES (TOGETHER AND EACH INDIVIDUALLY "KGS") CANNOT PROVIDE ANY ASSURANCE THAT ANY PERSON OR ENTITY BUYING ITS PRODUCTS, INCLUDING ANY "AUTHORIZED DEALER" OR "AUTHORIZED RESELLER", IS PROPERLY TRAINED OR EXPERIENCED TO CORRECTLY INSTALL FIRE AND SECURITY RELATED PRODUCTS.

For more information on warranty disclaimers and product safety information, please check <https://firesecurityproducts.com/policy/product-warning/> or scan the following code:



This Data Sheet is subject to change without notice. Please contact GST for more information or questions.

Gulf Security Technology Co., Ltd.

No. 80 Changjiang East Road, ETDZ, Qinhuangdao, Hebei, P. R. China 066004

Tel: +86 (0) 335 8502434 www.gst.com.cn